

MEIZU
M8 User Manual



welcome

Meizu M8 is a new generation of mobile multimedia digital phone. Excellent Mymobile touch control system, super compatible expansion Its functions, excellent reliability and simple and exquisite appearance design complement each other, and it will bring you endless surprises and free enjoyment.

Welcome to the official Meizu website www.meizu.com! Meizu is dedicated to providing you with online value-added services, and will release software upgrades and other rich download resources from time to time. The BBS forum will bring you more product usage tips and help. Please stay tuned!

Due to the continuous update of product functions, the user manual in your hand may be different from the actual operation. Please download the latest user manual from the Meizu official website. This user manual was updated on February 23, 2009.

Table of contents

1. Getting started

5	important hint
6	Trademarks and Limited Liability
7	Accessories List
8	Mobile phone installation
12	Power on, power off and lock the screen
14	Component Description
20	Screen Icons
23	Task Management
23	Enter text

(II) Basic operations

26	Steps
27	Save the file and disconnect from the computer
29	Download Document

(III) Quick functions

30	Telephone
39	Music Playback
43	Video playback
45	Photo shoot
48	
50	calendar
51	internet
54	mail

56	information
58	document
59	E-book
60	Notes
61	clock
63	Settings
68	Calculator
(IV)	Others
69	Troubleshooting
70	Notes

important hint 

To avoid unnecessary damage, please pay attention to the following information before using the Meizu M8.

- **Traffic safety** Please comply with all local laws and regulations. Try to use both hands when driving.
Traffic safety is the primary consideration.
- **Safe boot** Do not switch on the device when the use of wireless devices is prohibited or when use of the device may cause interference or danger.
- **interference** All wireless devices may be susceptible to interference, which could affect performance.
- **The phone should be turned off in the hospital** Please turn off your mobile phone near medical equipment and in medical facilities where it is marked that mobile phones cannot be used.
- **On the plane** Please observe any applicable restrictions. Wireless devices may cause interference to aircraft.
- **Turn off the machine when refueling** Do not use this device in a gas station. Do not use this device near fuel or chemicals.
- **Near the blast site** Observe any applicable restrictions. Do not use this equipment where blasting operations are in progress.
- **Qualified repairs** Only qualified service personnel should install or repair this equipment.
- **Accessories and Batteries** Please use original accessories and batteries. Do not use incompatible products.
- **Waterproof** This device is not waterproof. Please keep it dry.
- **Make a backup** Back up important information stored in your phone or keep a handwritten record to prevent loss.
- **Connecting other devices** When connecting other devices, please read the user manual of the device for detailed safety instructions.
Do not connect incompatible products.
- **Emergency call** Make sure your phone is in network coverage and switched on. Unlock and return to standby mode if necessary. Enter the emergency number and press the call key to notify your location.

● Trademarks and Limited Liability

© 2004-2008 Meizu Inc. All rights reserved.

Meizu and the Meizu logo are trademarks of Meizu Inc. registered in the People's Republic of China and overseas.

Meizu (or its licensors) own all legal rights, titles and interests in the Products, including but not limited to

any intellectual property rights in the Services (whether those rights are registered or not, and wherever in the world those rights exist)

The Services may include information that Meizu has designated as confidential. Without the prior written consent of Meizu, any use of the Products or Services is prohibited.

The software and part or all of this document may be transcribed, copied, reproduced or translated.

When you copy such content, you will be solely responsible for the legal liability of the copying behavior.

This has been stated in the installation activation, product itself or software upgrade, so please pay attention.

Manufacturers and importers are not responsible for product damage caused by accidents (including human or other force majeure).

Meizu assumes no responsibility for any errors or omissions in this document. Meizu will continue to provide new

The contents of this document are subject to change without prior notice.

Meizu will be committed to meeting the needs of consumers with better products. Please read this manual carefully before using this product.

The information in this instruction manual is based on current product information.

This version is only available in Mainland China (excluding Hong Kong, Macau and Taiwan). Meizu does not provide after-sales service outside of Mainland China.

[About postage shipping costs.](#)

[This model is so sold in mainland China only\(exclude HK and Macau\),or the freight](#)

[about after sales service would not be committed.](#)

Zhuhai Meizu Technology Co., Ltd. (hereinafter referred to as Meizu Company)

 Accessories List

Contains the following items:



earphone



USB connection



Product warranty certificate



Quick Start Guide



cleaning cloth



USB Power Adapter



Battery



installation CD

- The above pictures are for reference only, the items provided with the phone may vary depending on your region or service provider.
- Mobile phone accessories can be purchased from local Meizu dealers or Meizu website (www.meizu.com).
- Only use software authorized by Meizu. Pirated or illegal software may cause damage or malfunction, and the manufacturer will no longer give warranty.

- Mobile phone installation

Install the SIM card and battery

1. Please install it when the phone is turned off. Long press the "Power button" to pop up the shutdown dialog box, and select "Power off" to shut down. 2. Press your palm against the back cover and slide it toward the bottom of the phone. When there is a 3-5mm gap, you can lift up and remove the back cover.



3. Open the pressing piece and put the SIM card into the fixing slot with the contacts facing downwards. Align the cut corner of the SIM card with the cut corner of the SIM card slot.

Squeeze tablets tightly.



4. Align the gold contacts on the battery with the corresponding contacts on the phone, and then press down on the bottom of the battery until it is fixed in place.

In the tank.

Align the battery contacts



Press the bottom



5. Make sure the battery is in the correct position, then replace the battery cover and slide it towards the top until it snaps shut.

Slide the back cover upward



Close the back cover



Charging batteries

When using the M8 for the first time, the battery must be charged.


The battery of M8 is a rechargeable battery, and a USB power adapter is provided with it. You can operate M8 during the charging process. The

steps for charging using the USB power adapter are as

follows: 1. Insert the battery into M8

correctly; 2. Connect the USB power adapter plug to the USB port at the bottom of M8 in the correct direction; 3.

Connect the USB power adapter to a standard AC power outlet.

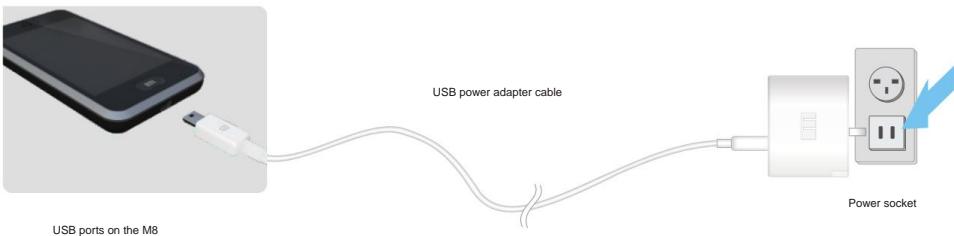

Due to low battery, the M8 will display a red battery icon during the boot process and the M8 will not start. Connect the charger and the M8 will display the charging icon. At this time, press the power button to turn on the phone and enter the desktop. The battery icon on the M8 screen will display the charging icon, indicating that the phone is charging. When the phone is locked, the M8 will display the charging process in an animation. When the battery is full, The M8 screen will display the battery full icon. When charging is complete, disconnect the charger from the standard power outlet and then

Disconnect the M8 from the charger.



Display when battery is low



Charging when locked

Notice:

1. If the battery is completely discharged,

The icon will appear after charging for 2 to 3 minutes.

Generally, the charging time is about 2 to 3

hours, depending on the current status of the


phone (whether it is turned on, in a call, etc.).

2. Please use the standard battery and charger,

otherwise it may cause danger.

[Connect M8 to computer](#)

As shown in the picture, end A is connected to the computer and end B is connected to the M8. When connecting, please pay attention to the direction of the USB port.

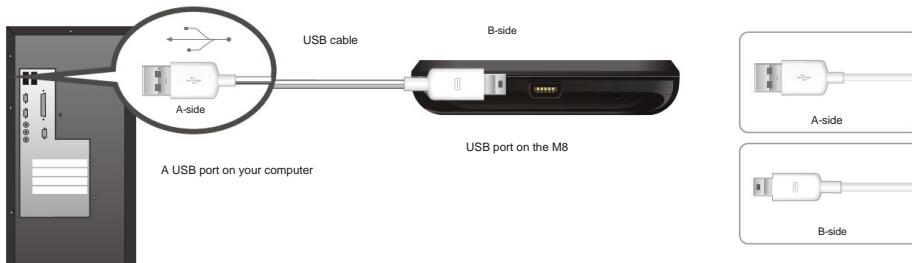

1. The M8 power is not turned on

Connect to the computer via USB cable, the screen will automatically turn on and charge its built-in battery without pressing any keys. The charging process is the same as "Charging with a charger".

The M8 battery is completely exhausted. When connected to a computer, the M8 shows that it is charging.

2. The M8 power supply has been turned on


When the M8 is powered on, connect it to the computer via USB. The built-in battery can be charged while connected. When connected to the computer for the first time, it will show that new hardware is found. Set the M8 to synchronization mode. If the computer cannot recognize the M8 normally, please use the accompanying CD to install the driver. Set the M8 to USB disk mode. After the installation is completed, "Removable Disk" will be displayed in My Computer. When the M8 and the computer are connected, if you do not perform any operation on the M8, the M8 will automatically lock and the LCD screen will be displayed as shown below.



- Power on, power off and lock the screen

Power on

Press and hold the "Power button" until the Meizu LOGO is displayed. If the SIM card used in your M8 has enabled PIN code verification, you need to enter the correct PIN code after turning on the phone before the phone can be turned on normally and connected to the GSM network. If you enter an incorrect PIN code three times in a row, you will need a PUK code to unlock it. Please contact your card issuer to obtain the corresponding PUK code.

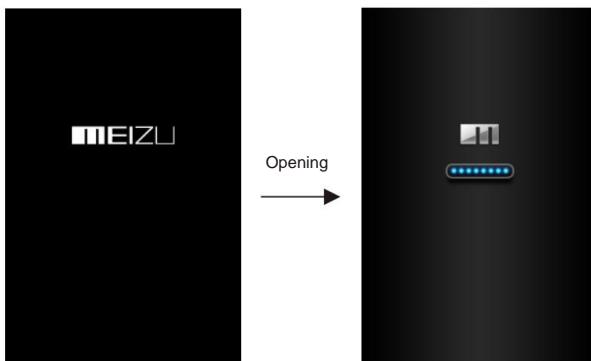

To [shut down](#) or

restart, press and hold the "Power button" until a selection box pops up and select "Power off" or "Restart".



Locking

the screen When you are not using the M8 but still want to answer calls and listen to music, you can lock it. When the M8 is locked, touching the screen will not initiate any action. You can still listen to music, adjust the volume, and use the buttons on the built-in stereo headphones to start or pause songs, and you can also answer calls. By default, if you do not touch the screen for 30 seconds, the M8 will automatically lock the screen. And turn off the screen to save power. Press the M key to activate the screen, and drag the icons on the screen to the designated area to unlock. When the music program is running, press the M key to switch to another set of modes.



Drag it to the designated area to unlock and enter the main interface directly. Drag it to the designated area to unlock and enter the contacts directly.


Drag to the designated area to unlock and enter the dial directly.

Drag to the designated area to unlock and directly enter the information.

Drag to the designated area to play a piece of music.

Drag to the designated area to pause the music.

Drag it to the designated area to play the next piece of music.

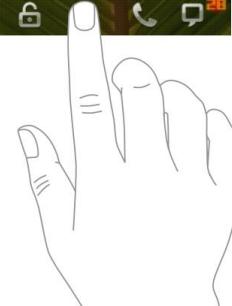

 Component Description

1. Parts Name

1. Above



2. Left side

Volume +
Volume -



3. Front

earpiece
touchscreen
M key



4. Right side

Music Keys



5. Below

microphone
USB Port



6 Back



2. Buttons

With the M8, you can quickly access common phone functions by pressing certain buttons. Here are some common shortcuts:

Key operation method and function:



Short press this key to lock/activate the screen; long press this key to pop up the power off dialog box.

Power button



The volume can be adjusted.

volume button



When the device is locked, long press the play button to pause or play the music; when the device is unlocked and the music is not playing, press and hold this button to start the music. When the music is playing, short press once to pause and long press to play, double press to play the next song.

Music Keys



When the phone is locked, short press this button to activate the screen. When the phone is unlocked, press the M button to return to the main desktop.

M key

Long press the M key to pop up the task manager, tap the selected program to enter; tap to close the running program. During a call, press the M key to go to the desktop, double-click to return to the call interface. Press

the M key and the volume button at the same time to turn the ringtone

on and off. Press the power button and M key at the same time to capture the current screen and enter "Camera Photos" in "Photos" to view it.

3. Use Stereo Headphones

The M8 earphones come with a microphone and buttons for multi-function controls, such as answering calls, playing music and videos.

Plug in headphones to listen to music or answer calls. Even when the M8 is locked, you can press the remote control button to

Control music playback, answer or end calls.


[Operation of the remote control buttons](#)

When playing music or video, press the remote control button once to switch to start/pause playback

Press the remote control button twice to skip to the next song

When a call comes in, press the remote button once to answer the call. When a call comes in, press the

remote button once to end the call. Press and hold to reject the call and hang up the call.

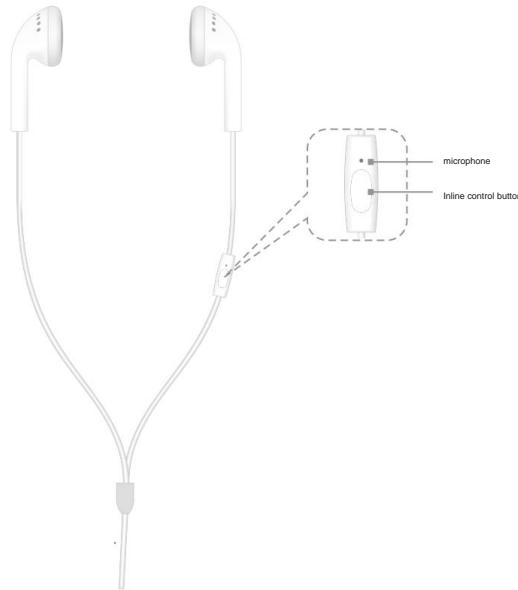

4. Display

M8 can use various functions of the phone through touch screen operation.

1. Make sure your hands are clean and dry. 2. When using the touch buttons, you do not need to press hard and do not hit the M8 violently. 3. Use your fingertips to accurately press the touch buttons you need. To prevent scratches, do not use pens, pencils or other sharp objects. Use an object to tap or write on the screen.

Learn the basics of using the touch screen:

- **Touch:** Touch the screen lightly once with your finger.
- **Drag :** Touch and hold an icon on the screen with your finger to move it.



On the main desktop,
touch any icon on the
screen to enter the
application



Drag the icon to the
designated area

• Press and Hold your finger on the screen and drag it up or down to scroll the vertical list.

drag your finger to the right to scroll the horizontal list.




In the contact list, drag up or down to scroll the screen. There is an index on the right side of the contact and artist lists. Tap a letter and a magnifying glass will appear on the left to enlarge the letter and jump to the list starting with that letter. Move your finger along the index to quickly scroll the list.




During music playback, drag left or right to switch screens to interchange albums, lyrics, and spectrum star ratings.

- Touch the screen twice in succession.

Double-tap: In photo browsing, you can drag left or right to browse quickly. You can also double-tap to zoom in on a photo; double-tap again to zoom out.

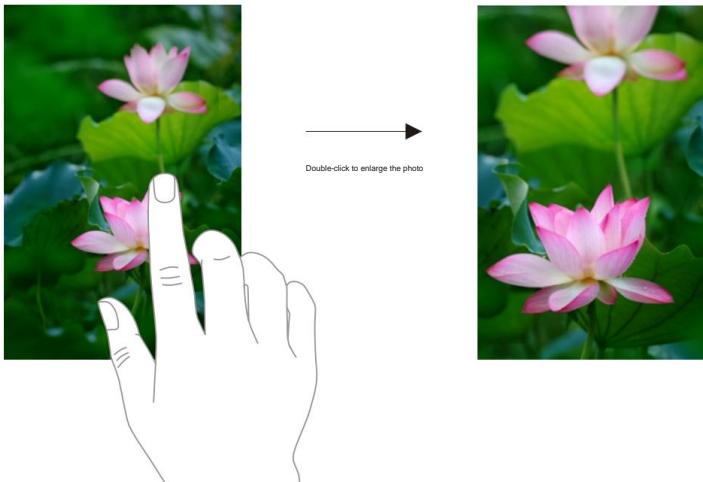


- Pinch: Spread two fingers apart or close them on the screen to zoom in or out on the photo.

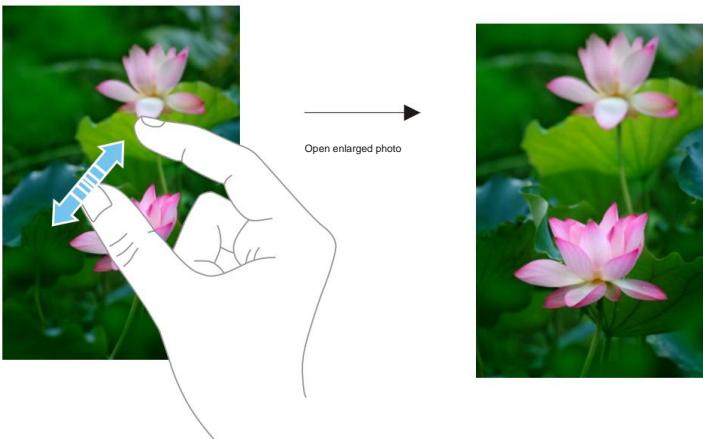

● Screen Icons

1. Main desktop icons

Press the M key to display the M8's applications. Touch any application to start using it. Swipe left on the home screen to switch to the next screen and swipe right to switch to the previous screen. Long press the main desktop icon and a check box will appear. You can drag the icon to arrange its position. If you keep pressing the icon and drag it to the right, you can move it to the next screen. Press Press M to confirm.

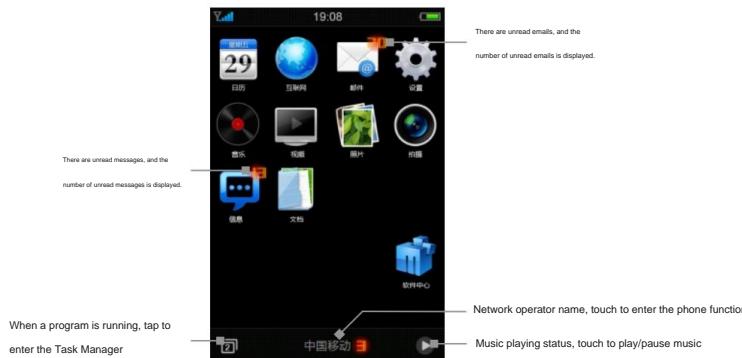

Touch the middle of the transparent bar at the bottom of the screen to enter the phone function. When there are missed calls, the number of missed calls will be displayed on the left side of the bottom bar of the screen; when there are unread emails and unread messages, the number of unread messages will be displayed on the main desktop.



Calendar Set alarms to remind you of events, appointments and deadlines.



Internet

browsing via GPRS network.



Mail

settings: Mail accounts are used to send and receive emails, using the standard POP3 mail system.



Music

supports multiple music formats, album image display, lyrics synchronization, dynamic spectrum, and music classification.



The

video supports multiple formats, such as FLV, MP4, AVI, etc., and plays smoothly.



picture

View photos synced from your computer or taken with the M8, either by sliding to zoom or in slideshow mode.



Shooting The M8 is equipped with a 3.2-megapixel autofocus camera, which provides you with high-quality shooting functions. After the work is completed, you can send it via email, MMS, etc.



Messages

are communicated with devices that have SMS sending and receiving capabilities. You can easily view the message records between you and others.



Documents can conveniently view M8 files and set encrypted folders.



E-book

TXT text viewing and bookmark setting.



Notes

for jotting down notes, to-do lists.



Clock

Displays the time of the day around the world. Set one or more alarms, use stopwatch, countdown.



set up

Set ringtones, wallpapers, screen brightness, network settings, auto-lock and security passwords, etc.



Calculator for

addition, subtraction, multiplication, division and other mathematical operations.

2. Status Icons

The top line of the screen is the title bar, which displays the following icons to indicate the phone status. The icons displayed on the display may vary depending on the country or service provider.

	Battery	Displays the battery level or charging status.
	Play	Indicates that a song is playing.
	Mobile phone signal	Shows whether you are in network service area and can make calls. The more bars there are, the stronger the signal.
	Calling	In call status.
		Airplane mode means that you are in airplane mode and cannot access network, Bluetooth and other functions.
	Processing	Indicates that GPRS is transmitting data.
	Alarm	Indicates that an alarm reminder is set.
	Mute	Indicates the mute state.
	locking	Indicates that the M8 has been locked.
		Call forwarding means that unconditional forwarding is set.
	Bluetooth	White icon: Bluetooth is on and a device such as headphones is connected. Gray icon: Bluetooth is on but no device is connected. No icon: Bluetooth is off.

● task manager

During the operation of M8, you can use the Task Manager to view the running status of M8 programs and close unnecessary programs.

program to speed up the system operation; you can also easily switch from the current program to another running program.

To open and exit the Task Manager,

when a program is currently running, touch the icon on the left side of the taskbar below the main desktop or press and hold the M key. The Task Manager will pop up. Press the icon or the M key again to exit and return to the main desktop.

Access open programs and close programs

Switch directly to another open program from Task Manager by tapping the selected program. Close a program by tapping its icon.



Touch the icon or long press the M key to enter the task management



task manager

● Enter text

When you use your phone, you can use the on-screen keyboard to enter text, such as adding contact information, writing messages, creating memos, etc.

You can use the on-screen keyboard to enter Chinese, English, symbols, and numbers.

Steps to input

1. Touch the text input box and the keyboard will pop up automatically. The input box will light up and a cursor will appear.

Flashing. For example, add contact information and write information;

2. Touch the keys on the keyboard.

The default input mode is the Chinese Pinyin input keyboard. The current status is displayed. Touch to switch

to the Chinese Wubihua input keyboard, and then touch to switch to English input.

Keyboard. Touch to switch to the number and symbol keyboard.



Chinese Pinyin Input M8

provides intelligent Chinese Pinyin input. Use the screen keys to input the corresponding keys of the Pinyin letters and select characters or words in the candidate area. For example, if you input "df", "ÿÿÿÿÿÿ" and other words will appear in the character selection area for selection. You can also turn to the next page to select more phrases by touching.

Chinese Wubi Stroke Input

M8 provides an extremely easy-to-use Chinese Wubi Stroke input. Use the screen keys to input the corresponding Wubi strokes, and select characters or words in the candidate area. The "?" key can be used to input any stroke. Touch the "?" key once to input the character "?", and double-click to input ". ". To input phrases, the

"ÿ" (including left vertical strokes separated by "ÿ" including right vertical strokes) "here but once". Wubi Strokes include: 1. Horizontal "ÿ" (including "ÿ") 2. Vertical

4. ÿ"ÿ" (including "ÿ")

English Input

When the current keyboard is an English input keyboard, you can enter English letters. For example, if you enter "d", "d do" will appear in the candidate area. down did don" etc. You can also touch to turn to the next page and select more phrases.

To enter a capital letter, tap the key, and when the Caps Lock key is on, press the letter again. To enable Caps Lock, the Caps Lock key turns blue and all letters you type are capitalized. Tap again for a lowercase letter.

Digital symbol input

Touch in Chinese or English to switch to the digital symbol keyboard, directly enter the corresponding symbol and it will appear in the input box

immediately.

[Hide the keyboard](#) When entering text, touch the title bar to hide the keyboard for easy viewing of the content.

[Magnifying glass displays text.](#)

When entering text, select the text and press and hold it to display the magnifying glass, which can be positioned by moving the cursor.



Magnifying glass effect

[Copy and paste text](#) E-

books, emails, text messages and other applications that use multi-line edit boxes support text copy and paste functions.

1. Copy text while reading

Long press on the text content, and the left and right text selection sliders will appear. Press and hold the slider to drag to select the text you want to copy. When

there is a lot of text content, you can drag the screen and then move the slider to select other text; you can also long press the right slider to automatically scroll up to select text or long press the left slider to automatically scroll down to select text. Click any unselected area to cancel the text selection state, and the slider will disappear. Long press the selected area, and the text will be copied to the clipboard. The clipboard supports up to the last three copy operations.

2. Copy and paste text while editing

When editing text, click the keyboard button to switch to the punctuation and number input keyboard.

There are four small icons at the top of the keyboard.



Show or hide the text selection slider. Move the slider to select the text to be copied.

Content, long press the text content to copy.



Undo button to undo the last pasted content. Redo button




to redo the last undone content. Clipboard button to show




or hide the

clipboard, the clipboard can select the required content to paste, only supports the most recent three copied content. Delete the clipboard content, select the content to be deleted, slide left and right, and then touch the "Delete" button.

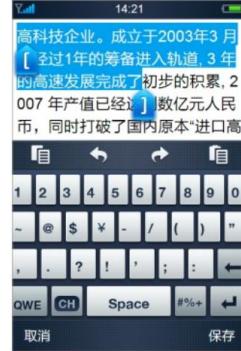

Steps

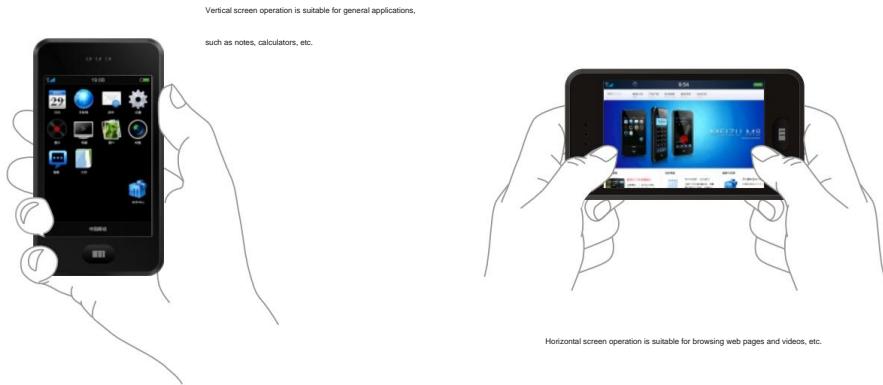

The basic steps

1. Connect M8 to your computer via a USB cable and charge it at the same time. 2. Use the CD provided to install the supporting software (e.g., install the USB driver, etc.). 3. Search for songs, videos, pictures and other files on the computer and copy them to the [Removable Disk] on the computer.

Should be in the catalogue:

4. Unplug the USB cable connecting M8 and PC; 5. Connect the earphones to the earphone jack of M8; 6. Start using.

From the main

desktop, tap the corresponding icon to open the application, you can listen to music, watch videos, make calls, etc.

● Download Document

Please make sure that the M8 is connected to the computer and the USB port in the M8 is set to U disk mode.

Download music, videos, pictures and other files from CDs or websites, and then copy the downloaded files to a removable hard disk. The following is an example of copying songs:

1. Find the song file in the folder on your computer.

2. Select [Copy] in the [Edit] menu. As shown below:

Drag the mouse to select the song. As shown below:




3. Double-click the [My Computer] icon on the desktop to open the My Computer window. Double-click [Removable Disk]. As shown below:



The M8 appears as a removable disk on the computer.

4. Enter the Music folder

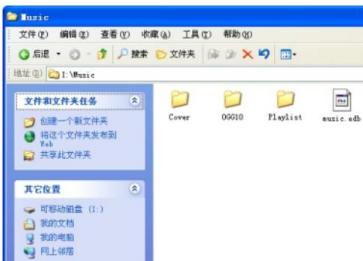

5. Select [Paste] from the [Edit] menu.



6. After the file is copied, the icon of the music file will appear in the removable disk window. After disconnecting, start the music player and update the music library to listen to the music.



When copying files, you need to copy them to the specified folder. Videos are copied to the VIDEO folder, and pictures are copied to PHOTO folder, music to MUSIC folder, e-books to EBOOK folder, otherwise M8 related programs will not be able to recognize them.

After copying music and video files, you need to go through "Update". All copied files can be viewed in "Documents".

- Save the file and disconnect from the computer

When the USB port is set to USB disk mode, copy the files in the M8 to the computer.

- After connecting the M8 to the computer, open Windows Search.
- Save the audio, video files, pictures and other files you want to use in the M8 to the computer's hard drive.
- After saving the files, click the icon in the computer tray.
- When the following pop-up message appears, click it.



- The "Safely Remove Hardware" window will be displayed;



- Click the "OK" button and unplug the USB cable.


To ensure the integrity of data stored on the removable disk, follow the instructions for safe hardware removal before disconnecting.

If the following message appears, it does not mean that the product is faulty. You can perform the safe hardware removal steps after waiting for a while.



Telephone

When making a call, make sure you are connected to the GSM network and touch the middle of the transparent bar at the bottom of the main desktop to enter the phone function.

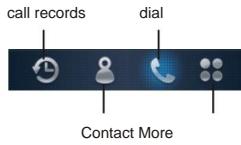

The blue effect below the icon indicates the current location.

When only a portion is displayed, it is the next level to the current location. Touch this icon to return to the previous level.



Touch to return to the previous level

《 is the current location. Touch it to return to the previous level.



Calling interface

1. Make a call 1 Direct

dial

Touch to enter "Dial", enter the number on the keyboard, and then touch to dial. If you make a mistake in entering the number, press Delete.

If you have set up a speed dial, you can long press the number key to dial directly. If the phone number can be recognized by the phone book, the name will be displayed on the dial screen.

2. Through contacts

Touch to enter contacts, and then touch a name in the contact list. Then touch a phone number from the contact information. The call will start.

3. From call history

Touch to enter the call log. Touch a name or phone number in the call log list. Touch a phone number in the call log details. The call is dialed.

2. Answering a call

When there is an incoming call, the incoming call interface is displayed, along with the contact information, a specific ringtone or vibration. Press **M** button to answer the call, and long press to reject the call.



If the caller number is stored in the phone book, the name, designated avatar and other information will be displayed, and music or vibration will be played according to the designated ringtone and current settings; if the other party hides the number or the network prohibits caller ID, the caller ID will be "hidden number". Touch [Answer] to answer the call. You can touch [SMS] to automatically send a pre-set quick message and hang up the call; you can touch [Reject] to hang up the call. Once connected, the call interface will be displayed. If you cannot answer the call, the number of missed calls will be displayed on the left side of the task bar below the main desktop.

Incoming call when the phone is locked



Drag the icon to the designated area above to answer a call; Drag the icon to the designated area above to reply to a text message; Drag the icon to the designated area above to reject a call.

During a call, you can do the following:

1. Touch Hold. If the network supports it, you can hold the current call. 2. Touch Contacts to enter the contact list and view contact information. 3. Touch Record to record the call as audio. Find the corresponding audio file in the Recorder directory in the document.

Playback

4. Touch Hands-free to answer the call through the speaker. 5.

Touch Keyboard to enter the information required by the automatic voice system. Touch "Keyboard" to return to the operation interface. 6. Touch "Mute". The other party cannot hear you, but you can still hear the other party. Press "Mute" again and the other party will not be able to hear you.

Your voice will be heard again; 7. To

end the call, click "End".

- If you answer the call through the headset, you can answer it by tapping the remote control button.
- During a call, tap the M key to return to the home page and use other programs. For example, open a note, browse files, etc.
- If you cannot answer the call, the number of missed calls will be displayed in the middle of the transparent bar at the bottom of the main desktop when in standby mode.

To the right of the operator name, when the phone is locked, the number of missed calls will be displayed in the upper right corner of the phone icon.

Adjust the earpiece volume

During a call, you can press the up and down volume keys to adjust the earpiece volume. Press the [up key] to increase the volume; press the [down key] to decrease the volume.



Call interface

[Answer the second call](#)

If a second call comes in during a call, the screen will display that the second call is waiting. The call waiting feature is available only if the network supports this service and you have activated it in the call waiting menu. To learn how to activate and deactivate this feature, see "Call waiting". You can answer the second call by touching [Hold and answer]. When the second call is connected, the first call is automatically put on hold. Press [Hang up and answer] to answer the second call and hang up the first call.

[Multi-party call](#)

Multi-party call allows you to talk to multiple people at once. This feature requires network

support. Steps to establish a multi-

party call: 1. Answer the first call normally;

2. Answer the second call, and the first call will be automatically put on hold; 3.

Press [Merge] to join the first call to the three-party call. After the operation is successful, the name of the other party will be displayed on the call screen.

The participants can hear each other. In a multi-party

call, touch [Hold] to put all participants on hold. Touch to switch between hold and call.



[Make an emergency call](#)

You can make emergency calls within the range of the GSM network.

You can still make emergency calls even if you have registered with the local network. Type 112, press , and make an

emergency call. Note: When the phone is turned on and a prompt to enter the phone lock password or PIN code appears, touch [Emergency

Call] on the input keypad to make an emergency call.

[To make an](#)

[international call](#), press the [0] key until the "+"

symbol appears, enter the country code, area code and phone number. Press .

3. View call records

You can view a record of recent received, missed, and dialed calls, as well as call duration information.

1. Touch to enter the call log, and the icon for the most recent missed call will be displayed in red.
2. The icon in front of the contact in the list indicates the status of the most recent call. If only missed calls are displayed, touch "Missed Calls".

If the record has been saved in the contact list, the contact information will be displayed. Touch to view the call record details.

To clear all call records, just touch the "Total x Records" button, then touch "Delete Records". The

detailed record includes the phone number, contact name (email) and all call records. If the caller is not in the M8's contact list, you can save the number to the contact by touching "Add to Contacts".

For the contact process, please refer to Add Contact.

In the detailed browsing window of phone records, you can send a short message to the phone number by touching it.

Touch the phone number to call it directly. Touch "Mobile" or "Other" to edit before dialing. Touch "Total * Records" to pop up the "Add to Blacklist" and "Delete Records" dialog boxes. Select "Delete Records" to clear all call records of the contact.

Call history icons: Received calls Missed calls Dialed calls Rejected or blacklisted The most recent call number will be displayed in blue.



Call log details

IV. Contact Person

You can save contact names, phone numbers and related information in M8, and you can back up contacts to folders in M8 or synchronize them with contacts in Windows.

In the phone, touch to enter  contact or in the locked state, drag the contact icon to the unlock area to unlock.

Directly to the contact.

Add contact information

You can view and add contact information directly on your M8. If someone calls you, emails you, or sends you a message, you can add it to your contact list. You can simply enter a new contact directly on the phone.



Create a new contact

 directly Select a contact, touch , and then enter the contact information.

Enter a number on the dial pad to add a contact

When you press an index letter, the corresponding enlarged letter will be displayed

1. Type the number on the keypad and touch .

caller information or "Add to existing contacts".



Add to contacts from call log

Touch a contact in the call log and view its details. Then touch Add to contacts and enter the caller's information, or touch Add to existing contacts.

Edit a contact's phone number, address, and other information

Touch  "Contacts" and select a contact. In the contact details, touch to enter the editing state. You can  add multiple phone numbers,

specify a specific ringtone for incoming calls, and add other information.

To set or change a photo for a contact

1. Touch  "Contacts" and select a contact; 2. In the contact details,

click to enter the editing state; 3. Touch  the avatar area, and a dialog

box will pop up to select "Take a photo" or "Select an existing photo";

3. Tap "Take Photo" to take a photo with the camera. Or select "Existing Photos" and select a photo;

4. Change the photo size to your liking. Double-click to zoom in or out. You can drag the photo up and down, left and right.

Delete a contact

Touch "Contacts" and select a contact. Touch to edit the contact details. Touch  Delete, and a deletion confirmation dialog box will pop up. Touch [OK].

[Finding Contacts 1.](#)

Alphabetical Index

The names of contacts in the phone book are arranged in a mixed Chinese and English format, and the English and Chinese characters are sorted in alphabetical order. Users can continuously touch the index letters on the right to quickly find a contact. 2. Quick Find

The input letters will be matched according to the first letter (initial consonant) of the Chinese name. Touch the letters on the contact list.  , then type

For example, after entering "XT", the contact "Xu Tingting" can be found  . Touch Return.



View contacts

Touch a contact to view contact details. In the contact details, touch to send a message to the  number. Touch a phone number to dial it directly. Touch "Mobile" or "Other" to edit before dialing. Touch  to enter the contact editing.



Contact details

Contact grouping

makes it easier to find and operate contacts. M8 provides groups such as Ungrouped, Family, Friends, Colleagues and Classmates for selection.

5. More

[SIM card management](#)

Touch More in the phone, then touch  SIM card management, and you can operate the SIM card: 1. Copy SIM card contacts to phone: copy all contact information on the SIM card to the contacts of the M8; 2. Copy phone contacts to SIM card: copy and save all contact information on the phone to the SIM card; 3. Clear SIM card contacts: all contact information on the SIM card will be deleted, so please operate with caution; 4. SIM card contacts: you can select contacts in the SIM card and copy them to the phone or delete them; 5. SIM card lock: after setting the SIM card lock, you need to enter the SIM card password when turning on the M8 to access communication services. 6. STK application: It is a variety of value-added services provided by network operators. Users can use menu information instructions to Send to perform related operations.

[Contact](#)

[Management](#) In the phone, More, tap Contact Management

1. Back up contacts: Back up mobile phone contacts and save them in the "Contact/Backup" file of Disk in "VCF" format In
2. Import contacts: Import contacts supports "VCF" and Windows contact formats, which can import contacts from personal computers. Convert the contact information into a supported format, copy it to the "Contact/ Backup" folder and import it into the phone;
3. Send contacts: You can send contact information via email, message and Bluetooth; 4. Clear phone contacts: Delete all contacts in the phone.

[Call](#)

[forwarding](#) Call forwarding can be set in the following ways: 1. Unconditional forwarding: forward all calls unconditionally; 2. Unreachable forwarding: forward calls when the network cannot reach your phone; 3. No answer forwarding: forward calls when you do not answer; 4. Busy forwarding: forward calls when you are on a call; 5. Cancel all forwarding: cancel all call forwarding settings.

Note: The call forwarding function requires network support. Please contact your network operator for details.

Call Waiting

Turn Call Waiting on or off On the phone, touch More, select  Call Waiting, and then turn Call Waiting on or off.

Refuse to


answer calls When you need not to be disturbed, you can turn on the reject call function. You can specify the group in the contact list to reject calls. If you turn on reject call and specify the stranger group, when the incoming call number is not in the contact list, the incoming call interface will not appear, and the missed call reminder will be displayed directly in the call log.

Speed Dial

Pre-assign a number key on the dial pad to a frequently used phone number. The corresponding label will appear under the assigned number key.

When dialing, just long press the key to dial. If edit before dialing is turned on, you can edit before dialing.

When you **reply to an incoming call with a quick text message**, touch  to automatically send a pre-set quick text message and hang up the call (as shown on the right). To set up a quick text message: Touch  on the phone, select "Quick Text Reply", and enter SMS content.

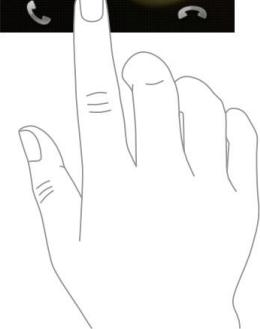

● music

Supports multiple music formats, including pop, rock, classical, dance, RB, heavy and low equalizer, and each equalizer can be defined by yourself. Touch the main desktop icon to enter the music playback.




Play can

be done by playlist, artist, album, all music, touch the file you want to play or play it in the file list.

Playback

Control A Touch (song name information area) and the page will expand or collapse downwards. The expanded part will display repeat, number of songs, music format, and random play; Touch (the middle area of the playing interface) to switch the control axis, that is, play time and volume adjustment. If the current volume is adjusted, the small speaker icon and volume percentage will be displayed; touch the middle area of the play interface to switch to play time, showing the elapsed time and remaining time.

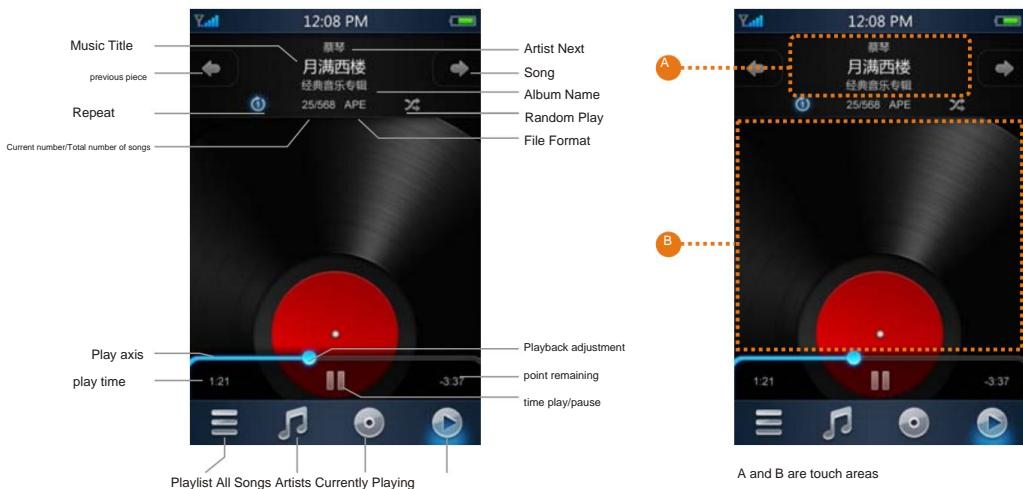

Touch or; Press the button to lock the device, long press the play button to pause or play music; when

Play/pause music Previous the device is unlocked, short press once to pause and long press to play. Touch or, quickly press the

or next song Increase or remote button of the headset twice to go to the next song. Drag the volume slider.

decrease volume Play at any

point in the music Drag the playback adjustment slider along the playback timeline. Repeat

Touch to repeat the song. When is on, it repeats all the songs. When it is off, it repeats all the songs.

When is non-repeating.

Shuffle Playback Touch, it up for random play, and it doesn't light up for sequential play.

During music playback, drag left or right to switch screens, and the album, lyrics, and spectrum star ratings can be switched interchangeably.



Touch the stars to rate the song.

Create a new playlist .

Music is playing. Touch to enter the . "Five-star songs", "Songs above four stars", and "Songs above three stars" are preset lists of M8.

You can create any playlist.

1. Touch "Create a new playlist"; 2.

Type a playlist name, such as "Hong Kong and Taiwan Popular". Then touch "Save";

3. Add songs to the playlist.

After you create a playlist, touch the new list to directly enter the add songs, you only need to select the songs you want in the music list or through the music folder, and touch "Done".

4. Switch to the spectrum star rating, touch to rate the song, and the rated song will be displayed in the star-rated songs in the playlist.

Editing a playlist 1. In

the playlist, touch the playlist name to enter, such as touch "Hong Kong and Taiwan Pop"; 2. Touch

"Edit List"; 3. You can add

songs, sort songs, remove songs from the playlist and delete the playlist.

Add Songs

Touch "Add Songs", you just need to select the songs you want in the music list or music folder, and touch "Done". Song sorting Press and hold the

semi-transparent bar on the left side of the song, drag the song up or down to

delete

Select all songs to be removed, touch "Delete", and a delete dialog box will pop up, you can choose "Delete Selected" and "Delete List". Select "Delete Selected" to delete all selected songs, and select "Delete List" to delete the list.

Play folder 1.

Touch to enter all songs, touch "Music folder";

2. Select the folder you want to play in the file browser and touch it;



3. Start playing the songs in the folder.

Play by Artist and Album

1. Touch to enter the artist; 2. Touch

the artist you want to play to enter the artist's album. If there are multiple albums, touch "Play all songs in the current directory" to play the music of all artists;

3. Touch the album name you want to play, and all the music in the album will be displayed. Touch "Play all songs in the current directory" to play.

Play all the music on the album.

Update the music information

library After copying the music to the M8 MUSIC directory, the music library needs to be updated before it can be displayed.

1. In All Songs, tap; 2. A dialog box  pops up to

update the song library information, tap "Complete Refresh" or "Quick Refresh"; 3. When the update starts,

an update progress bar will be displayed. The speed of the update depends mainly on the number of songs. If there are many songs, the update will take longer.

It will take longer.

Edit ID3 information

1. Touch to enter more; 2. Touch

"Edit ID3 Information"; 3. Type text in

the "Artist", "Title" and "Album" input boxes respectively, and then touch "Save".

Change the

cover 1. Touch to enter more; 2.

Touch "Change Cover", and touch "Change" in the cover preview; 3.

Select the picture you want to set as the cover in the file browser, and then touch "Save".

Lyrics Sync

1. Copy the lyrics to the same directory as the song file or create a new directory called lyrics in M8 Disk/music.

The suffix is .lrc;

2. The name of the lyrics should be consistent with the song name. For example, if the song name is "Back to the Past.flac", then the lyrics should be "Back to the Past.lrc".

Setting the Equalizer

1. Touch to enter more;
2. Touch "Equalizer";
3. Select an equalizer you want; 4. Touch "Adjust" to customize the value of the equalizer; 5. Touch "Save" and then touch Done.

**Automatic stop**

1. Select time, set the play time to stop playing at the specified time.
2. Select the number of songs and set the number of songs to play. The song will stop playing after the specified number.

Set treble, bass and volume limits

1. Touch to enter more;
2. Drag the adjustment point on the control axis to set the treble, bass and volume limits respectively, and then touch to complete.

For Bluetooth

playback, please create a connection between your phone and the stereo Bluetooth headset in "Settings". If Bluetooth playback is turned on, you can listen to music through the Bluetooth headset.

● video



It can play TV programs, movies, MTV and other videos. Touch the main desktop icon to enter the video play.

Play

In the video catalog, touch the video you want to play.

Playback Controls

The video can only be played in widescreen format, touch the screen to display the playback controls. Touch again to hide them.

Returns the volume axis volume adjustment block volume ratio



Play/Pause video

Touch or Press the remote control button or the music key to play/pause.

Increase or decrease the volume

volume adjustment slider.

Previous or next video Play at

Touch or

any position in the video Return to the

Drag the playback slider along the timeline.

video list Return to the

Touch

main desktop Zoom

Press the M key.

the video to play it in full screen 1 Touch the video to switch to full screen then touch to reduce the original ratio



Example playback.

2 Double-click the screen to switch the video to full screen playback, and double-click the screen again to

When you zoom out, black edges will appear on the sides or top of the video.

The video is cropped in the view.

Delete video to

You can delete videos from the document or swipe left or right in the list to delete them.

update media library

After copying the video to the M8 Disk/MusicVideo directory, you need to update the media

The video library can be displayed in the video list.

[Continuous Play](#)

After the current video is played, the next video will be played automatically.

Enter the video, tap "Settings", tap "Turn on" to turn on this feature, and then tap "Done".

?

[Ambient Light Sensing](#)

automatically uses the built-in ambient light sensor to adjust the screen brightness for current lighting conditions.

Enter the video, tap Settings, tap On or Off for Ambient Light Sensing, then tap Done.

[Dimming](#)

You can adjust the screen brightness when playing a video. Enter the video, touch "Settings", drag the "Brightness Adjustment" slider; then touch "Done".

[Set treble, bass and volume limits](#)

1. Enter the video and tap "Settings"; 2. Set the treble, bass and volume limits separately by dragging the adjustment points on the control axis; 3. Tap Done again.

[Bluetooth playback](#)

Please create a connection between your phone and the stereo Bluetooth headset in "Settings".

Turn on Bluetooth playback and you can listen to the sound of the video playback through the Bluetooth headset.

● photo

M8 provides you with convenient image browsing. Touch the icon on the main desktop to enter the image browsing function.

Browse pictures


Pictures include camera photos, photo albums and other custom folders.

1. Touch the folder you want to browse; 2. Touch

the picture you want to view in the picture thumbnail list to view the picture in full screen; 3. Swipe left or right to view


the next or previous photo; 4. Display photos horizontally;

Rotate the M8 90 degrees sideways and the photo automatically changes orientation, and if it's in landscape format, it's enlarged to fit the screen.

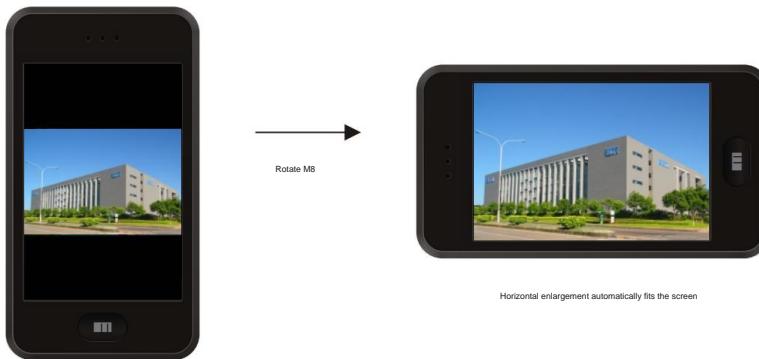


5. Enlarge the photo to display part of it;

Double-click the area you want to zoom in on, and double-click again to zoom out.

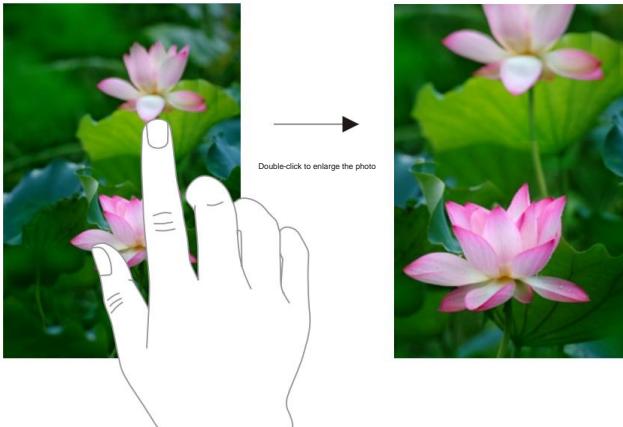

6. Zoom in or out;

Spread two fingers apart or pinch them together on the screen to zoom in or out on the image.

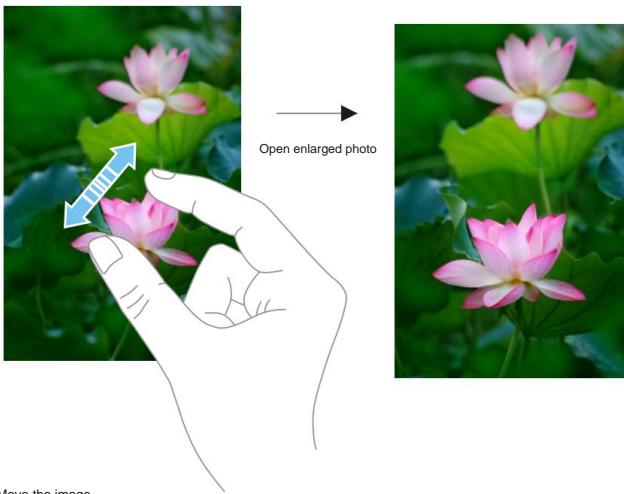

7. Move the image.

After the image is enlarged, slide it to move it around.

Slideshow To browse

pictures in slideshow mode, touch the

picture folder you want to browse, and then touch Play. To set up the

slideshow, touch "Settings"

from "Pictures" and set the following: 1. Picture dwell time, the

length of time each slideshow will be played;

Touch "Image Stay Time" and select the playback time, 1 second, 3 seconds, 5 seconds, 10 seconds, 20 seconds are available. 2. Backlight off time, the backlight will be turned off at the set time;

Touch "Backlight off time" and select the backlight off time. There are 10 seconds, 20 seconds, 30 seconds, 40 seconds, 50 seconds, and 60 seconds to choose from.

3. Transition effect between photos, touch "Slideshow effect" and select the transition type; 4. Whether to display photos in any order, turn "Shuffle" on or off; 5. Whether to repeat the slideshow, turn "Repeat" on or

off; 6. Backlight brightness, the backlight brightness when browsing pictures; 7. Ambient light sensing, touch "On" or "Off" to automatically use the built-in ambient light sensor to adjust the brightness of the current lighting conditions.

Screen brightness.


M8 supports PNG, TIF, JPG, GIF, and BMP image file formats.

Send pictures

Select any picture, touch, and then  select the sending method, including "Send by Email", "Send by MMS" and "Send by Bluetooth". 1. To send by email, you need to set up your personal email account, refer to Email for details; 2. To send by MMS, the network operator needs to support and activate the MMS function.

Delete picture

Select the picture you want to delete, then click  and select "Delete picture" in the pop-up delete dialog box.

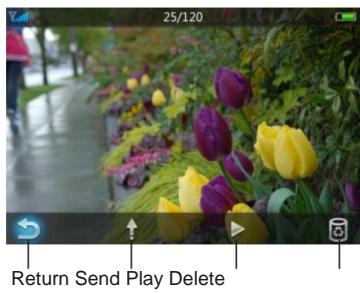

Touch anywhere on the screen and a transparent operation bar will appear. Touch the screen again and the control bar will disappear immediately or automatically disappear after about 5 seconds without any operation.

Play music while enjoying a slideshow

Select "Music" from the main desktop to start playing a song, then return to the main desktop and select "Photos" to start the slideshow.


Filming



The M8 has a built-in 3.2-megapixel camera with multiple shooting modes, allowing you to share wonderful photos with your family and friends. You can also record short videos. Touch the main desktop  to enter the shooting function.

When

taking a  press and hold the "Music Button" to automatically focus, and the focus point will change from white to green. Release it to take a photo. If you rotate the M8 sideways to take a photo, the photo will be automatically saved in landscape orientation.

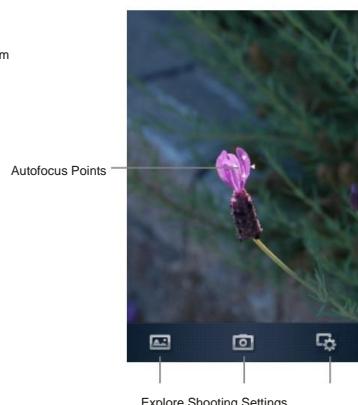

Select different resolutions to take

 photos. The M8 camera can select four resolution modes, including: 640x480, 1024x768, 1600x1200, 2048x1536. The default is 2048x1536. Select resolution: Touch and select the required resolution.

Browsing photos

To view photos directly from the camera:

1. Touch in the camera; 2. To 

photos in full screen, touch the photo you want to view in the photo thumbnail list; 3. Swipe left or right to view the next or previous photo.

Shooting video clips 1.

In camera mode, touch 2. Switch to 

recording, touch to select a video resolution, including: 320x240, 640x480 3. Start recording, touch. The upper left corner shows the recording time 4. Pause recording, touch, if you want to continue recording, touch again 5. Take a photo, during the recording process, press and hold the focus,  to take a photo. The recording is paused during the  shooting process, and continue after the photo shooting is completed. 5. Stop recording, touch 6. You can play the video clip from  the video or directly touch in the video recording.



Shooting metering, white balance, brightness and focal

 length Press the "Volume + key" to switch "Metering", "White balance mode", "Brightness" and "Focus", and press the "Volume key" to set or select the corresponding parameter mode.

1. Exposure

metering Press the "volume key" to choose to turn off the exposure metering; spot exposure metering; automatic exposure metering.

2. White balance mode

Press the "Volume Key" to select Auto; Fluorescent; Incandescent. 3. Brightness adjustment

Press the "Volume

Key" to select 8 levels of brightness. 4. Focus

adjustment Press

the "Volume Key" to select 6 levels of zoom.



In the calendar, you can view the calendar and set event reminders. Touch the main desktop icon to enter the calendar.

[View the](#)

[monthly](#) calendar The main screen displays the monthly calendar for the current month. The current date is displayed in blue and is selected

by default. Dates with events have an orange dot on the upper right. When a date with an event is selected, the event topics are listed below.

You can scroll up or down to view all event topics for the selected date. Touch or to view the dates of the previous month or the next month.

[View all events](#) Touch

"List" to display all events in a list for quick browsing. Scroll up or down to view past or future dates.

[View daily events](#)

Touch "Day" to view all records for the day, touch or to view the previous or next day.

[To view today's events](#), tap Today.

[Add an event](#)

1. Tap "Add" ; 2. Set the event: Title Content Start and end time Reminder 5 minutes to 1 day before the time and display reminder message Repeat No, daily, weekly, monthly or yearly
3. Touch Save.



[Deleting an event](#)

1. Select the event you want to view in the list; 2. Touch Delete, a confirmation box pops up, touch "Confirm".

[Edit an event](#)

Touch any event, then touch "Edit" to edit.

● internet

M8 makes your web browsing and surfing more convenient. Touch the main desktop icon to enter the web surfing. [Browse the web](#)

1. Touch the address bar at the top of the screen, type the web address, press to cancel the input, and the web page will automatically disappear after loading.

Hide the address bar; Touch the middle of the title bar at the top of the screen to show or hide the address bar.

2. Touch the right end of the title bar to display or hide the bottom control bar; Touch the left end of the title bar to switch to the previous page.

[Zoom in on a](#)

- [web page](#) to view it in landscape

orientation Turn your M8 sideways and the browser automatically adjusts and zooms in on the page.



- Fit the web page to the screen, and you can also partially enlarge the web page

The M8 automatically adjusts web pages to fit the screen. Tap on the part of the page you want to enlarge, and double-tap again to zoom out.



- Manually zoom in or out

Spread or pinch two fingers to zoom in or out on a web page.



- Scroll through the pages

You can tap and drag anywhere on the page and the page will scroll. Links will not be activated while you drag. If you tap a link, the page will reopen.

The icon

indicates reloading the page content.

When the icon is on, the entered URL or link in the page will be opened in a new window. When it is , the entered URL will be opened in the current window. If the link in the page is opened in a new window or in the current window, the link will be used as the default. List all open windows. Touch the window title to call up the opened web pages. Touch to close the open page.

window.

Open the previous page and the next page.

Add current page to favorites1 .

Enter the URL in the address bar to browse the web; 2. Touch then touch "Favorites"; 3. Touch "Add current page"; 4. Enter the title of the web page; 5. Select the creation location; 6. Save.

Organize favorites

1. Touch  touch "Favorites"; 2. Touch "Organize"; 3. Touch, then touch  "Delete" button to delete a folder or title; 4. Touch "New Folder", type the folder name, and press "Save"; 5. Drag the URL title up or down to adjust the position of the URL, and then touch "Done".

View and clear history

1. Touch  then touch  "History"; 2. Select the time of the history you want to view in the list, touch to enter and browse; 3. Touch "Clear", and in the pop-up dialog box, touch "Clear All".

Set as

homepage Touch "More" from the Internet, then touch "Settings", then select "Add current page as homepage", in the input box, you can type other content or delete it. Then touch "Save".

Security

Settings From the Internet, touch "More", then touch "Settings", you can make the following settings:

1. Set to enable or disable Cookies

Cookies are used to record your specific user information when you visit a website. When you return to the website, the webpage can be personalized based on the information you provided.

2. Set Javascript on or off. Website developers

use Javascript to control specific functions of web pages, such as the display of time and date.

3. Block pop-up windows

The pop-up blocking feature only blocks those pop-ups that appear when you open or close a web page. It does not block those pop-ups that appear when you click on a link.

The website can implement functions through plug-ins, such as playing videos.

Clear History Settings

1. To clear all history, tap "Clear History";

All visited website addresses will be cleared. You can view the URLs visited on all dates from the "History" tab. 2. To clear all cookies, tap "Clear cookies"; 3. To clear the browser cache, tap "Clear cache".

The browser will save the webpage content you browsed to the M8 cache area so that you can open the page more quickly next time you browse. If the webpage has updated pictures or other content, clearing the cache can make the website display the new content.

● mail

M8 uses the standard POP3 mail system, you can send and receive text, pictures and other attachments through mail. Touch the main desktop icon to enter the mail. To send and receive mail using M8, you must have an email address. You can get it from your mail service provider.

[Setting Up an Email Account](#)

You can set up or change your email account directly on the M8. Your email service provider can provide you with the account settings you need to enter.

1. If you are setting up an account on your M8 for the first time, tap the mail icon on the main desktop to enter, then tap "Settings"; 2. Tap "Add Account" in Accounts; 3. Enter your account information:

If you are setting up a meizu account, enter the account information, incoming mail server (host name, user name and password) and outgoing mail server (host name, user name and password). 4. Tap "Save".

[Set Basic Settings](#)

1. Default Account If you have added multiple email accounts, you need to specify one as the default account. 2. Automatic update can be turned off, every 15 minutes, every 30 minutes, every 1 hour. 3. Display can set the number of new emails that M8 displays. 4. Font size Displays the font size of the email content.

[Create and send an email](#)

1. Tap "New" 2. Enter the email address in the recipient field. You can enter multiple email addresses. You can also tap the "+" icon and select contacts directly from the contact list. You can select multiple contacts.
3. Type the subject and content of the email. If you need to send attachments and contact cards, click Insert, select "Insert Attachment", select the file you want to insert from the file browser; select "Insert Contact Card", and select the contact from the contact list. 4. Click "Send" If there are emails that have not been sent yet, they will appear in the "Outbox", and when they are sent, they will appear in the "Sent" box.

[Save a draft for later use](#) Compose

your message and click "Cancel". Then click "Save". You can find the message in "Drafts", make changes, and then send it.

[View, reply and forward emails](#) 1 Open

the "Inbox" and touch an email in the email list to enter it; 2. If there are many emails, you can drag them up or down to browse. Touch the email content to pop up a semi-transparent box, then touch or to view the previous and next

emails;  

3. Click "Reply" and a dialog box will pop up;

Touch "Reply to Sender" to reply only to the sender; touch "Reply All" to reply to all recipients; touch "Forward" to forward this email, and you can add email content when forwarding.

4. Click "Send".

When you have unread emails, the total number of unread messages in your inbox will be displayed in the upper right corner of the "Mail" icon on the main desktop. The "Inbox" will display the number of unread emails in the email list, before the unread emails.

[Delete emails](#)

one by one

Open the email, touch the email content to pop up a semi-transparent box, and then click the  icon. You can also delete directly in the email list, slide the email you want to delete left or right, and then touch "Delete". Delete multiple emails at the same time through "Select". 1. In the email list, touch

"Select"; 2. Select the emails to be deleted, you can select multiple; 3. Touch "Delete", and in the pop-up confirmation dialog box, touch "Remove".

The deleted emails will appear in "Deleted Items"; deleting emails in "Deleted Items" will completely delete them and cannot be restored after deletion.

[Download attachments from emails](#)

Mail can send and receive emails with attachments and display them before the email. 

Open the email with the attachment. If the attachment is a picture, a preview will appear. Tap "Download Attachment" to save it to a folder. If the attachment is a file format that the M8 cannot recognize, the file name will be displayed. Tap the file name to pop up a save prompt box. Tap "Download Attachment".

information 

You can reply and view messages as easily as chatting. If there are unread messages, the number of unread messages will be displayed on the main desktop and the locked desktop. You can access the messages by touching the main desktop icon.



New/View

1. Touch "New" and enter the recipient number directly or touch "+" and select a contact from the contact list.
You can repeatedly touch "+" to add multiple contacts for group messaging;
2. Edit the content to be sent, and then touch "Send". 3. Swipe up or down to view the information. If the content contains 7 to 16 digits,
You can tap to retrieve and save to contacts. If there are unread messages, the number of unread messages will be displayed in the upper right corner of the main desktop and the "Message" icon on the lock screen.



reply[View information](#)

1. In the message list, touch the contact you want to reply to. 2. Touch "Reply", type the content you want to reply, and then touch "Send".

Forward

1. In the message list, touch a message contact to enter; 2. Touch "Select", then select the message to be forwarded. You can only select one message. If you select multiple messages, the forwarding will be invalid; 3. Touch "Forward"; select the contact, then touch "Send".

Delete a contact and all messages in the message list Swipe to delete 1. In the message list, swipe from left to right on the message contact; 2. The background of the selected message contact is orange, tap the "Delete" button; Messages cannot be restored after being deleted, so be careful. Select a method to delete

1. In the message list, touch "Select", then select the contacts to be deleted. You can select multiple contacts. 2. Touch "Delete", a deletion dialog box pops up, then touch "Confirm Delete".

Deleting information content by "selecting"

1. In the message list, touch a message contact to enter; 2. Touch "Select", then select the message to be deleted, multiple selections are allowed; 3. Touch "Delete", a deletion dialog box pops up; touch "Confirm Delete".

MMS

requires network support and MMS settings

1. Touch "New" and enter the recipient number directly, or touch "+" to select a contact from the contact list; 2. Touch "More" and then touch "Insert"; 3. Touch "Insert Picture", select the desired picture, and touch "Send".

Talk or email someone you have already messaged 1. In the message list, touch the contact you want to reply to enter the message; 2. Touch the top of the message content list to enter the contact details; 3. Touch the phone number to start dialing, if you touch the email address, send the email.

Add the contact you have sent a message to the contact list 1. In the message list, touch the contact you want to reply to enter; 2. Touch the top of the message content list to enter the contact details; 3. Touch to add relevant contact information, such as name, email address, etc.; 4. Touch "Save".

Settings

In the message list, touch "Settings", and then you can set: I. Basic settings 1.

Preview new SMS

content Set "On" or "Off" to turn on or off the pop-up display of message content when there is a new message 2. Reject SMS with no sender Set "On" or "Off" to turn on or off the rejection of messages with no sender 3. MMS reception Set "On" or "Off" to turn on or off the function of receiving MMS 4. MMS automatic download can be selected from "Off", "All", "Contacts in address book" 5. Display conversation

You can choose between "25 latest conversations", "50 latest conversations", "100 latest conversations", "All conversations"

6. Display information

You can choose between "25 latest messages", "50 latest messages", "100 latest messages", "All messages"

2. Server settings can be

set manually: 1.

Server address 2. Proxy address 3. Proxy port 4. GPRS connection point 5. User name 6. Password

7. SMS center



You can view all the files and folders in the M8 storage, and perform various operations on the files and folders, such as deleting, copying, and encrypting folders. Touch the main desktop icon to enter.



Browse

and open "Documents" to enter the "Disk" directory by default. Touch a folder to enter the next directory. The name of the previous directory will be displayed on the left. Touch the directory name on the left to return to the previous level. Touch the file recognized by M8, and the relevant application will be automatically called to open it. For example, touch a music file, and M8 will automatically open the music and play it. In a folder, if there are files and folders at the same time, the folder will be displayed on top; the file will display the file name, format and size. You can sort all the files in the directory by name, type, and file size.

Delete

1. Open "Documents" and select a folder; 2.

Touch "Select" and select the files or folders to be deleted. You can select multiple files or folders; 3. Touch "Delete" and a deletion dialog box will pop up. Touch "Confirm Delete". Note: Deleted files or folders cannot be restored.

Send

1. Open "Documents" and select a folder 2.

Touch "Select" and select the files you want to send. You can select multiple files; 3. Touch "Send" and select "Send via Email", "Send via Bluetooth", "Move File", "Copy File";

Send via email: You can insert the file as an attachment into an email. Then type the recipient and subject, and tap "Send"; Send via Bluetooth: You need to turn on Bluetooth and select a Bluetooth device, and then pair it before you can send the file.

Copy or move files: You can copy or move files to other folders, and you can operate multiple files and folders at the same time.

Create a new folder and set password protection for

the folder. You can set password protection for the folder and operate the folder only after entering the password correctly.

1. Open "Documents" and select a folder; 2.

Tap "Edit" and select "New Folder"; 3. Type the folder name, password and confirm password, then tap "Save".

Rename folder and remove password protection

1. Open "Documents" and select a folder; 2.

Tap "Edit" and select a folder. If the folder is password protected, enter the password to unlock it; 3. Enter the name of the rename folder. If you do not re-enter the password, it will be cancelled. Tap "Save".

● E-book



Support TXT text files, touch the main desktop icon to enter the e-book reading

Browsing, Editing and Bookmarking

1. In the list, touch the e-book you want to browse. 2.

Swipe up and down to scroll the e-book content. Touch or to browse the previous or next page. Touch the middle of the screen to read in full screen. Touch the top or bottom of the screen to flip up or down one screen. Touch, then touch to rotate the screen. You can choose "Auto", "No rotation", "Turn left 90 degrees", "Turn right 90 degrees" to browse. 3. Touch, then touch "Edit" to enter the e-book editing. You can delete or add e-book content. Touch "Save"; 4. Touch "Jump", enter the page number to jump, and then touch the "Jump" button; 5. Touch "Bookmarks", then touch "Add current page bookmark"; 6. Delete bookmarks, select the bookmark you want to delete, swipe left or right, and touch "Delete"; 7. Touch "Theme Settings" to set the browsing font size, display color and reading background.

Create

a new file 1. In the list, tap "Create a new file"; 2. Enter the file name and content, then tap "Save".

Open

the e-book to automatically read the file list in the M8 EBOOK folder. If the e-book file is stored in other directories, you need to browse it by "Opening" the e-book in the specified file directory.

1. Touch "Open" in the list; 2. Specify the directory where the e-book file is stored and touch the e-book file; 3. Browse the opened e-book.

Deleting a single file

1. Swipe left or right on the name of the e-book you want to delete in the list; 2. The background of the selected content turns orange and a "Delete" button appears, then touch "Delete".

Deleting multiple files

1. Touch "Select" in the list; 2. Select the e-books to be deleted; 3. Touch "Delete". If no e-books are selected, "Delete" is grayed out and touching it will have no effect; 4. A dialog box will pop up to confirm deletion. Touch "Delete".

Notes



Notes are used for casual notes. Touch the main desktop icon to enter. You can see the first part of each note in the note list. Touch a note to view the detailed content.

Create a

new note 1. In the list, touch "New";

2. Enter the content to be recorded; 3. Touch "Done".



Edit note content

1. Touch the note you want to modify in the list.

2. Touch anywhere in the note. When the input cursor appears,

You can move the cursor to delete or add text; 3. Touch "Done".

[View Notes](#)

Deleting a note

1. Touch the note you want to delete in the list. 2.

3. Touch the circular button in the middle of the note. 3.

The delete dialog box pops up, touch "Delete".

Send a

note1 . Touch the note you want to send in the

list; 2. In the note details, click "Send";

3. A dialog box pops up, where you can choose "Send via Email" or "Send via SMS".

● clock



Touch the main  icon to quickly access clock functions, including world time, alarm, timer and stopwatch.

1. World Time

[View](#)

Touch  to view world time, touch  , and then touch  to set the format, region and time. If more than four clocks are displayed in the list, you need to scroll up and down to view all the clocks. [Add](#) You can add

multiple clocks to view the time of major cities around the world 1. In World Time, touch  , and then touch "Add"; 2. Enter the city name, the list below will display matching city names according to your input, touch to select a city; 3. Touch "Done".

If you can't find a city, you can find the name of a major city in the same time zone as the city. [Remove](#)

1. In

World Time, touch 2. Touch  you want to remove from the list 3. Touch  Remove button, then touch Done.

2. [Add alarm](#)

You

can set multiple alarm reminders.

1. Touch, then  touch; 2. Touch  "Add"; 3. Set the

alarm: Time Set

the alarm reminder time. Label Add

a description text to the alarm, which will be displayed when the alarm sounds.

Loop Set the reminder date of the alarm.

Ringtone Select the sound that plays when the

alarm sounds. Snooze mode The alarm will stop and sound again after the set delay

time. Touch

"Save". 4. Touch "Done".

Modify alarm

1.  , then touch 

Touch the alarm you want to edit; 3.

Modify the alarm settings; 4.

Touch "Save". 5.

Touch "Done".

Delete alarm

1. Touch, then touch again; 

Touch the alarm you want to remove from the 

3. Touch the "Remove" button.

3. The timer

counts down to the preset time, and you can also choose a ring tone to remind you.

1. Touch and  set the time in the hour and minute input boxes; 2. Touch "Start" to start the timer, and you can touch "End" to stop the timer. If a ringtone reminder is set, the M8 will play music when the countdown is completed.

IV. Stopwatch

1. Touch, tap  "Start" to start the stopwatch; 2. Record

the time of a certain interval, and tap "Record" after each interval; 3.

Touch "Stop" to pause the stopwatch, and then tap "Start" to continue; 4.

Tap "Reset" to reset the stopwatch to zero.

● set up

You can customize the M8's settings, such as setting a personalized desktop wallpaper, date and time, and other specific operations. Touch the main desktop icon to enter the  settings.

[Airplane Mode](#)

Airplane Mode turns off the wireless function of the M8 to avoid interfering with the operation of aircraft and other electrical devices.

When Airplane Mode is turned , the status bar above will show that you cannot make or receive calls, send or receive messages, use Bluetooth and the Internet, etc.

You

can select a local network operator to access the service. If you select a network manually, when the network is unavailable, the M8 title bar will display "No Service" and you cannot use the network. When the network is set to automatic search, the M8 will automatically search for available networks.

[GPRS](#)

GPRS is a general wireless packet service. By turning on GPRS, you can browse the Internet and send and receive emails. This service requires the network support of the network service operator to work properly. For specific usage and related fee details, please consult your network service operator.

[Using Bluetooth wireless](#)

[technology](#) The M8 uses Bluetooth technology to wirelessly connect to other Bluetooth devices and exchange data, make hands-free calls, or remotely control the

phone. 1. Turn on

Bluetooth Select Bluetooth in Settings, then touch

Turn on. 2. Search and connect to

Bluetooth devices Select Bluetooth in Settings, then select My Devices to enter, and touch Search for new devices. Select the device you want to pair with from the searched devices, then enter the PIN code, and touch Confirm to

complete the pairing. For Bluetooth headsets or hands-free car kits, enter the default Bluetooth PIN code (usually

0000). Note: The phone may not be compatible with some other devices, and the Bluetooth connection may be affected by the surrounding environment.

[The USB port](#)

can select USB disk mode or synchronization mode, and you can also set whether to charge the M8 when the USB is connected.

1. USB charging is turned on. After connecting to a computer, the M8 will be charged at

the same time. 2. Set to USB disk mode. After connecting to a computer, "Removable Disk" will be displayed in My Computer. You can operate it.

Such as: file copy, cut and delete, etc. When operating M8 in USB mode, some applications will not be available.

The user needs to disconnect from the computer.

3. Set to synchronization mode. After connecting to a computer, you can use the ActiveSync tool to synchronize contacts and calendar events on the computer.

Synchronize. When synchronizing, please install the M8 USB synchronization driver and ActiveSync tool.

[System](#)

including date and time, security and other settings as well as restoring the M8 to its original settings.

1. Date and time

Once set, it will be applied to the title bar displayed at the top of the screen, and also to the world clock and calendar.

1. The time format setting displays 24-hour or 12-hour format;

Go to Settings, tap System, and select Date & Time. Then select 12-hour or 24-hour time.

2. City selection; Enter

touch " ", select "Date and Time", select "City Selection", then type in the search city, select the city, and touch "Confirm". 3. Set the date and time.

the system settings, touch " ", **Select** "Date and Time", select "Set Date and Time", then enter the date and time, and touch "Save".

2. Language

You can select the language interface used when operating M8. You can choose "Simplified Chinese" or "English".

the system settings, touch " ", **Select** "Language", and then select "Simplified Chinese" or "English".

3. Auto-lock When the

screen is automatically locked, there is no response when you touch the screen. You can receive calls and messages normally, and you can also adjust

the volume of the microphone during calls and when playing music. You can set the time for the M8 to

automatically lock. Enter the system settings, touch " ", select "Auto-lock", and then select the time for the automatic lock.

4. Password lock

You need to enter the password when unlocking, otherwise you will not be

able to use the

M8. Set a password Enter the settings, touch "System", select "Password lock", and enter a 4- to 8-digit password. You need to enter the password when

unlocking. Cancel the password lock function or

the password System Enter the ~~changes~~, touch " ", select "Password lock", "Change password" or "Cancel password", and you need to enter the new password

to change the password.

5. The

keyboard can be set to turn on or off the input method. Select

Fuzzy Pinyin to enter the settings, touch "System", select "Keyboard", and then touch the input method you want to turn on or off. Enter

Simplified Chinese, select Pinyin input, and then select "Fuzzy Pinyin". You can select multiple fuzzy Pinyin.

6. Data backup

The contacts, call logs, messages, calendar, clock, blacklist, speed dial, input method dictionary in M8 can be

Back up so that you can restore it

when you lose it. Backup: Enter Settings, touch "System", select "Data Backup", and touch "Backup".

Restore: Enter Settings, touch "System", select the time to restore, then select the item to restore, and touch

"recover".

7. System Restore

Restore network

settings Enter Settings, tap System, select Restore, tap Restore to Network Settings.

All network settings will be restored to factory defaults

Restore to factory settings

Enter Settings, tap "System", select "Restore", tap "Restore to factory settings". All settings will be

reset. Data stored in the M8, such as contact lists and media files, will not be deleted. Format all contents Enter Settings, tap "System",

select "Restore", tap

"Format all contents". Selecting this operation will clear all contents in the DISK.

sound

1. Set the ring volume 2.	Drag the volume slider and the volume percentage value will change accordingly.
Turn vibration on or off 3. Turn	Tap the Vibrate switch.
mute on or off 4. Set the incoming	Touch the mute switch to mute all ringtones of M8.
call ringtone and received new text message ringtone	Touch Incoming call ringtone or Received new message ringtone, and select a ringtone.
5. Touch the switch to turn New email on or off.	
6. Enable or disable sending emails 7.	Tap the switch.
Enable or disable key tone 8. Enable	Tap the switch.
or disable event reminders 9. Enable or	Tap the switch.
disable camera sound	Tap the switch.

brightness

Screen brightness affects battery life, so dim the screen to extend the time before you need to recharge your M8.

Or use the Ambient Light Sensor.

1. Set whether the M8 automatically adjusts the screen brightness
Touch the Ambient Light Sensor switch to turn it on or off. If Ambient Light Sensor is on, the M8 will automatically use Built-in ambient light sensor to adjust screen brightness for current lighting conditions.
2. Adjust screen brightness
Select Brightness adjustment and drag the slider.

theme

You can set the theme of M8 to make the M8 interface more personalized. Get it from Meizu website or create a personalized theme package manually.

And copy the theme to the Themes directory in Disk in M8.

Go to Settings, tap Themes, then tap Update List or select a theme from the existing theme list.

Click the "Apply" button.

wallpaper

When you unlock your M8, you'll see a background image. You can use the images that come with your M8, or you can customize your own wallpaper.

Choose Wallpaper and select a desktop background, lock background, or call background, then select a picture.

Headphone options

Select a working headset or one that is about to be recalled.

Dosage

View M8 usage statistics

1. usage time: The amount of time the M8 has been in use since the last full charge
2. Standby time: The time the M8 has been in use since the last full charge
3. Call time in this cycle and total call time: the most recent call time and total call time
4. GPRS network data transmission and reception: the data flow rate sent and received through the GPRS network

Information about M8

Enter Settings and tap "About...", including:

1. Total capacity
2. Available capacity
3. Hardware version
4. Software version
5. Serial number
6. Model
7. IMEI
8. Modem Firmware
9. Copyright

calculator



You can perform basic operations such as addition, subtraction, multiplication and division. Touch the  desktop icon to enter. Touch Add, Subtract, Multiply and Divide etc. buttons to perform calculation operations.

c: Clear the displayed number. m+: Add the displayed number to the number in memory. If there is no number in memory, Number, touch this button to store the displayed number in memory.

m-: Subtract the displayed number from the number in memory. mr: Replace the number in memory with the displayed number. mc: Clear the number in memory.



calculator

Troubleshooting

If you encounter a problem while using the phone, please refer to the following to solve it. If the problem persists, please contact your dealer or log in to the Meizu website. You can find common user problems on the Meizu website www.meizu.com.

Enter PIN Enter the correct PIN password. If you do not know the password, please contact your network service provider.

When you turn on the phone, the screen will display "Please enter the PUK code" three times. If you enter the PIN code incorrectly, your SIM card will be locked. To unlock it, you must enter the PUK code.

Unable to send information.

Please check whether the network signal is normal.

No SIM card is inserted

Verify that the SIM card is installed correctly. Check that the SIM card is functioning properly; it may be defective or malfunctioning. If this is the case, Please refer to your network service provider for resolution.

It shows that the service area is out of service. The network is faulty. Check the signal strength. If there is no network signal, you may be in a network blind area. Please move to another area to receive the signal.

Poor sound quality, echo or noise make the call difficult. Hang up the phone and dial again. The network service provider may transfer you to a line with better call quality.

Shorter standby time

The signal is weak in your location, and the phone takes a long time to search for the network. If you do not want to answer the call, please turn off the phone temporarily; or the battery has been used for too long and the battery life is about to end, so you need to replace it with a new battery.

The phone cannot be turned on to check the battery level or charge.

● Precautions

Usage Environment

Inadequately protected or highly sensitive electronic equipment may be interfered by radio waves. To ensure that you use your mobile phone reasonably,

To avoid impacts on you and the environment and accidents, please remember to comply with relevant rules and regulations when using your mobile phone anywhere.

1. Please turn off your phone in any place where there is a possibility of explosion, such as gas stations, fuel depots, chemical plants, or where explosive operations are ongoing.

machine and obey all safety signs and instructions therein.

2. Using a mobile phone on board an aircraft may interfere with the aircraft's flight operations and may be dangerous.

Li Zhongshi turned off his cell phone.

3. Some parts of the M8 are magnetic. Do not place credit cards or other magnetic media close to it during use to avoid demagnetization and loss of information. 4. In

hospitals, clinics, other health centers, and any places where there may be medical facilities near you. 5. Areas with potentially explosive

gases (such as gas stations and areas with dust particles such as metal powder in the air). 6. In vehicles transporting flammable products (even if the vehicle is

parked) or vehicles powered by liquefied petroleum gas (LPG), please check first.

Check whether the vehicle complies with current safety regulations.

7. In areas where you are required to turn off radio transmitters, such as quarries or other areas where blasting operations are ongoing. 8. Please consult your car

manufacturer to ensure that the electronic equipment used in your car will not be affected by radio waves. 9. Extremely high or low temperatures will

affect the performance of the phone and may also be dangerous. Please keep it between -10°C and 55°C.

Medical Devices

Please turn off your mobile phone near electronic medical devices that are explicitly required to be turned off (such as pacemakers, hearing aids, and other medical devices).

Most medical devices have the function of shielding the radio frequency signals generated by mobile phones, but some electronic devices do not have this function. If you

have any questions or are not sure whether the medical device has the function of shielding radio frequency signals, please consult a doctor or the medical device

manufacturer.

People with pacemakers should follow these recommendations:

1. Keep the phone at least 15 cm away from the pacemaker when it is turned on to avoid potential interference. 2. Do not put the phone in your chest

pocket. 3. Answer the phone with the ear that is farther

from the pacemaker to minimize potential interference. 4. If you feel that interference has occurred, turn off the phone.

If you are a hearing aid user, please consult your doctor and hearing aid manufacturer to find out whether the device you use interferes with your phone.

sensitive.

[Performance Improvements](#)

To improve phone performance, reduce radio radiation, lower battery consumption and ensure safe operation, please follow the instructions below: To achieve

the best and most satisfactory operating performance of your phone, we recommend that you use this phone in a normal operating posture.

1. Do not operate your phone in an extremely high or low temperature environment (keep it between -10°C and 55°C). 2. Do not immerse your phone in any liquid: If your phone gets wet, turn it off and remove the battery.

Then start using it.

4. To clean the phone, wipe it with a soft cloth. 5. A phone in standby mode consumes less energy if it is kept in the same place.

The phone consumes the energy required to transmit updates to the network.

6. Reducing the brightness and auto-lock time settings helps save battery power to provide longer talk and standby time.

[Traffic safety](#)

Studies have proven that talking on a cell phone while driving is distracting and can be dangerous. Please follow these instructions:

1. Pay full attention when driving. Pull over to the side of the road before using your phone. 2. Obey the laws of the area where you drive and use GSM phones. 3. If you want to use your phone in your car, install a hands-free car kit designed for this purpose, but you still need to make sure
4. Please make sure that your mobile phone and car combination will not hinder the operation of any airbags or other safety devices in the car.

[Notes on accessories](#)

1. Please keep all accessories (such as SIM cards, batteries, etc.) out of reach of children to avoid danger. 2. Before removing the battery, be sure to turn off the phone and disconnect the phone from the charger. 3. Since mobile phone accessories are not waterproof, please keep all accessories dry. 4. When cutting off the power supply of any accessory, unplug it correctly and do not pull the power cord.

[Battery Use](#)

Do not use damaged rechargeable batteries. When using the phone near a network base station, the battery consumption is small. Therefore, the talk and standby time are greatly affected by the signal strength of the cellular network and the parameters set by the network operator. When the battery life is significantly shortened, it is recommended that you replace the battery to ensure the performance of the phone. Use the battery and charger provided by Meizu, otherwise it may cause an explosion. Do not place the battery in a place where the temperature is too high or too low (keep between -1 0°C and 55° C). Do not short-circuit the battery, as a short circuit will damage the battery cell or the protection circuit inside the battery. Do not incinerate the mobile phone battery or dispose of the mobile phone battery as ordinary garbage. Comply with the environmental protection policies of the local government. If your mobile phone, battery or other charging equipment is accidentally exposed to water, do not put it in any heating equipment (such as a dryer, microwave oven, etc.) to dry it. [Warning: Meizu original batteries have reached the highest capacity of safety testing.](#)

[Using non-Meizu original batteries may damage the device or even cause personal injury. Meizu will not be held responsible for this!](#)

[Device Security and Backup](#)

The M8 supports Internet connections and other connection methods. Just like a computer, when connected, it may be infected by viruses, malicious messages and applications, and other harmful content. Please be careful when opening messages, accepting connections, and Before you connect to a request, download content, or accept an installation request, make sure it is from a reliable source. Consider installing, using, and regularly updating Update antivirus software, firewall, and other related software on your device and on all computers connected to your device to provide additional security protection for your device. Please back up important information stored on your phone to prevent loss.

[Other considerations](#)

1. Non-professionals are not allowed to disassemble the phone without permission. Any damage or accident caused by doing so shall be at your own risk.
2. When not using the phone, it is recommended that you turn off the phone and remove the battery.
3. When using headphones, do not adjust the volume too high to avoid hearing damage.
4. When using an external speaker in a public place, turn down the volume or use headphones as much as possible to avoid disturbing others.